

The Guardsman Shed Barrier Installation Instructions

Thank You for choosing Image4 Security!

Thank you for purchasing from Image4 Security. We pride ourselves on our customer service so if you have any issues or questions please call us on **01384 442 646**, email at customerservice@image4security.com or visit our website for FAQ: <https://image4security.com/faq>.

Below is a link to a step by step installation video. Please use these instructions as well as the install video to guide you through the install process. Simply scan the QR code with your smart phone camera and click to follow the link. If you don't have a smart phone the video link can be found on our website: <https://image4security.com/installation-videos>




Skill Level Required:

Average – please ensure you have the relevant skills necessary to complete the job. If in doubt please seek professional help. Installation can be arranged by Image4 Security – 01384 442 646.

Tools required for installation:

- Drill and bits:
 - 3mm for pilot hole
 - TORX 25 Bit
- Allan key – 4 and 5mm
- Spirit Level
- Pencil

Lifting Technique:

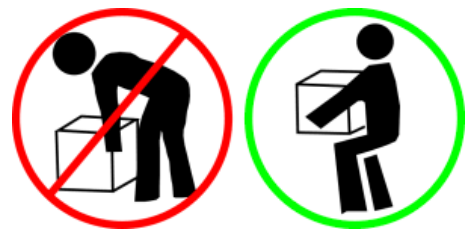

What's included:

Fixings Parts:	Qty	Barrier Parts:	Qty
TORX 12 45mm LG	6	Arm Post	1
M6 x 12mm LG Button Head Cap Screws	6	Locking Post	1
M8 Counter Sink Bolts	2	Barrier Head and Arm	1
TORX 12 25mm LG	12	Wall Mount (4 straight and 4 folded)	8
18mm Cover Caps	6	ZOVII Padlock	1
Floor Mounts	2		
40mm Cap	2		

Guardsman Shed Barrier Parts:

1. 2 x Floor mounts
2. 1 x Arm Post
3. 2 x 40mm Box Section Bung
4. 1 x Locking Post (with optional anchor point)
5. 1 x Barrier Head and Arm



Fixings Kit:

1. 6 x TORX 12 x 45mm LG
2. 6 x M6 x 12mm LG Button Head Cap Screws
3. 2 x M8 x 16mm LG Counter Sink Bolts
4. 12 x TORX 12 x 25mm LG
5. 6 x 18mm Cover Caps
6. 4 x Bent Wall Mounts (Ply lined shed)
7. 4 x Straight Wall Mounts (Non-Ply lined shed)
8. 1 x ZOVII Smart Lock




Pre-Installation Requirements:

1. Accept installation waiver and customer guarantee: www.image4security.com/installation-disclaimer
2. Ensure shed wall/frame and floor are suitable for installation.
3. Clear 1 metre radius around install location and check for any metal or pipe works under floor and in wall/frame.
4. For optimum security we recommend you position your Guardsman in accordance with the below diagram – ‘Shed Layout’, arm post against right door frame upright and the locking post on the left door frame upright, if you are inside your shed looking outwards.
5. If you have purchased a anchor point – ensure this is facing into your shed on your preferred side.


Shed Layout:



Post Explainer – Front View:

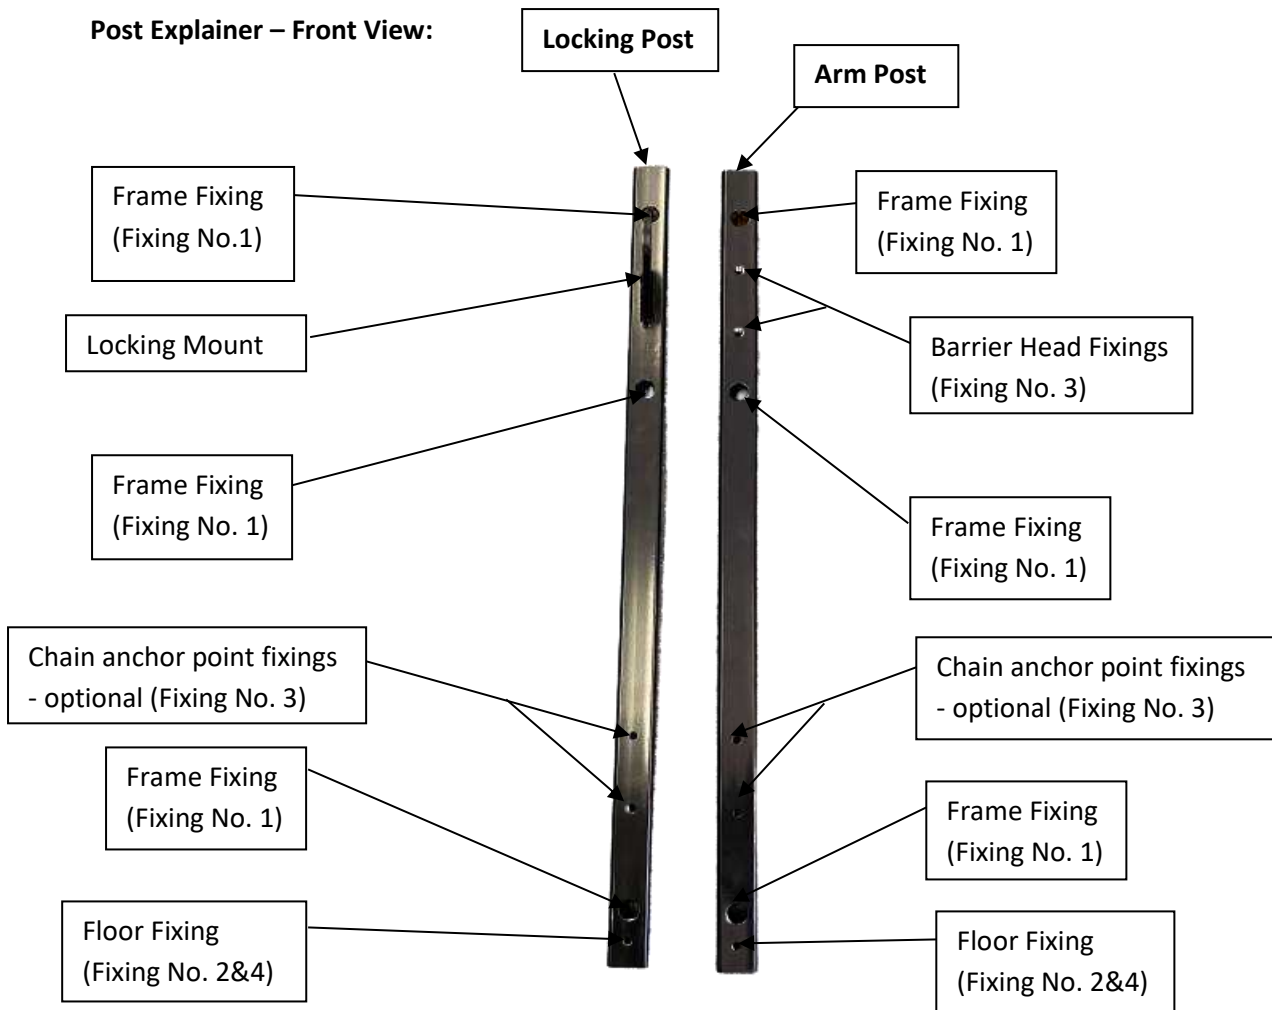

Post Explainer – Side View:

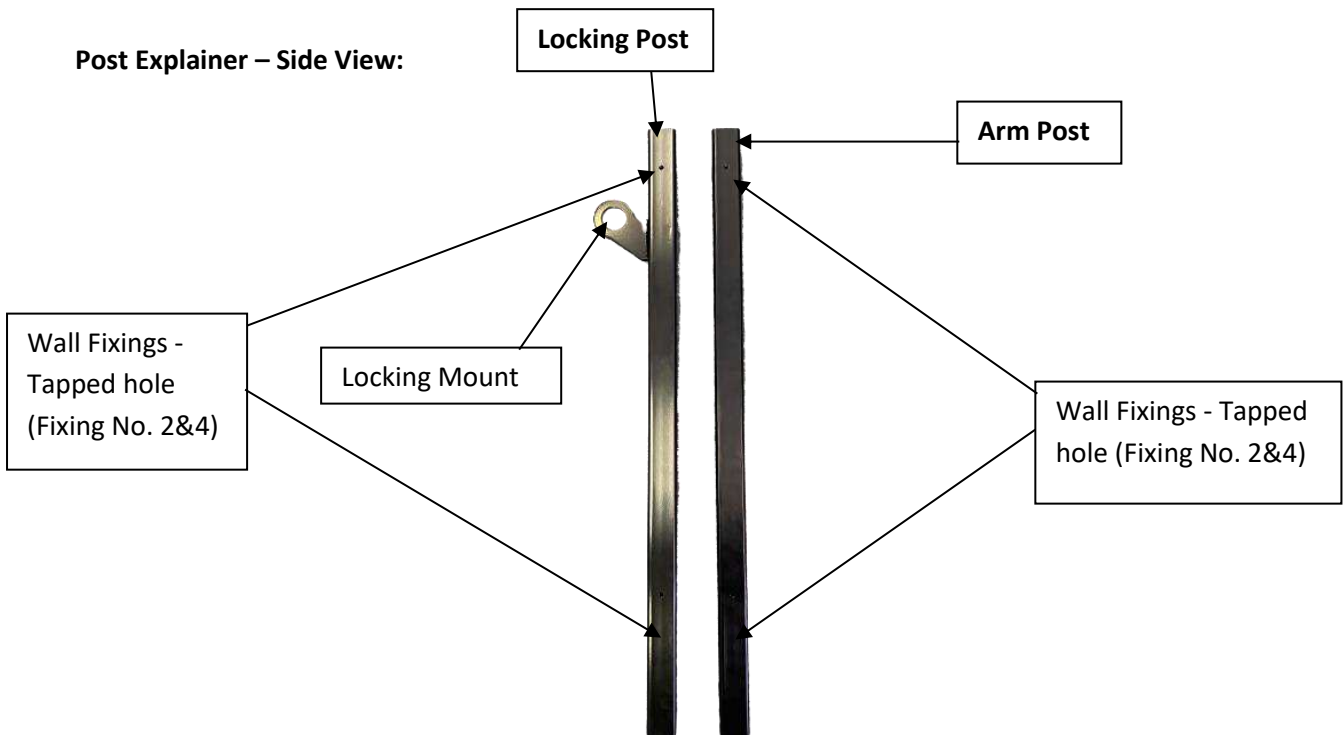

Installation Steps:

1. Complete pre-installation requirements.
2. Remove barrier and contents from the wooden packaging.
3. Decide whether you will attach the posts to the inside or outside of the door frame – ‘Shed Layout’ picture shows posts on the outside of the door frame.
4. Check to see if the floor is level and that there are no obstacles in the way for the floor mounts. At this point you can also decide which wall mounts to use – Straight (non-ply lined wall) or Folded (ply lined wall).
5. Attach floor mounts, if suitable, to each post using 2 x M6 x 12mm LG button head cap screws. Don't fully tighten at this point.
6. Attach upper chosen wall mount to each post using 1 x M6 x 12mm LG button head cap screw – as per picture across.
7. Stand locking post upright (extruding locking mount at the top) against frame on the left door frame and using level square up.
8. Using pencil mark the frame through the 3 larger holes.
9. Remove post and drill pilot hole, 30mm depth, with a drill bit less than 4mm in diameter.
10. Replace post and using 3 x TORX 12 x 45mm LG screws secure the locking post to the frame.
11. Repeat steps 6 through to 10 for the arm post. Ensure the floor mount is sitting on the floor. If the floor mount can't be attached ensure the small hole end is closest to the floor. Finished picture across.
12. Bolt barrier head using 2 x M8 counter sink bolts to arm post using the 2 M8 pre-taped holes. Ensure handle is facing upwards and plastic cap is pointing towards you. Picture below.
13. Pull arm down and across and into locking mount.
14. Screw 2 x TORX 12 x 25mm LG screws into each floor mount to secure into the floor (if applicable). Pilot hole prior to securing. Then tighten upright fixing.
15. Attach lower wall mount using M6 x 12mm LG button head cap screw to either post – picture below for reference.
16. Secure all 4 wall mounts into the frame using 8 x TORX 12 x 25mm LG screws. Use pilot hole before securing – picture below for reference.
17. Insert 6 hole caps into large holes, 3 on either post. Ease out the wings of the cap before inserting for a better fit – picture below.
18. Insert 1 40mm caps into the top of each post – picture below.
19. Set up ZOVII smart lock following the provided instructions.





Congratulations, your Guardsman install is now complete.

We'd love to see the finished result. Send your pictures to guardsmanpics@image4security.com

If you feel we could have done something better or you aren't happy with your purchase please let us know at customerservice@image4security.com and we'll do all we can to rectify the issue. Please include details of the issue along with your contact details.

Thanks again from all of us at Image4 Security.

